



SOLOS^{lite}

Pilots Manual EN



CONTENTS

Thank You	01
Warning	02
Your Solos Lite	03
Preparation	05
Under seat Protection	05
Speed System	08
Reserve Parachute Installation	09
Fitting / Adjustments	14
Reversing the Harness	17
Features	19
Use and Maintenance	21
Ozone Quality Guarantee	24
Technical Specifications	25





THANK YOU

Thank you for choosing Ozone.

As a team of free flying enthusiasts, competitors and adventurers, Ozone's mission is to produce paragliding equipment of the highest quality using cutting edge designs and the best technical materials available. Our development team is based in the south of France. This area, which includes the sites of Gourdon, Monaco and Col de Bleyne, guarantees us more than 300 flyable days per year. This is a great asset in the development of the Ozone range. We know that quality and value for money are essential considerations when choosing equipment, so to keep costs low and quality high we build all our wings and harnesses in our own production facility. During production all Ozone products undergo numerous rigorous quality control checks. This way we can guarantee that our equipment meets the same high standards that we expect ourselves.

If you need any further information about Ozone, the Solos Lite, or any of our products please check www.flyozone.com. Or you can contact your local dealer, paragliding school or any of us here at Ozone.

It is essential that you read this manual before using your harness for the first time.

Safe Flying!

Team Ozone



WARNING

- Paragliding is a potentially dangerous sport that can cause serious injury including bodily harm, paralysis and death. Flying an Ozone harness is undertaken with the full knowledge that paragliding involves such risks.
- As the owner of an Ozone harness you take exclusive responsibility for all risks associated with its use. Inappropriate use and or abuse of your equipment will increase these risks.
- Any liability claims resulting from use of this product towards the manufacturer, distributor or dealers are excluded.
- Be prepared to practice as much as you can - especially ground handling, as this is a critical aspect of paragliding. Poor control while on the ground is one of the most common causes of accidents.
- Be ready to continue your learning by attending advanced courses to follow the evolution of our sport, as techniques and materials keep improving.
- Use only certified paragliders, harnesses with protector and reserve parachutes that are free from modification, and use them only within their certified weight ranges. Please remember that flying outside of certified configurations may jeopardise any insurance (e.g. liability, life etc) you have. It is your responsibility as the pilot to verify your insurance cover.
- Make sure you complete a thorough daily and pre-flight inspection of all of your equipment. Never attempt flying with unsuitable or damaged equipment.
- Always wear a helmet, gloves and boots.
- All pilots should have the appropriate level of license for their respective country and third party insurance.
- Make sure that you are physically and mentally healthy before flying.
- Choose the correct wing, harness and conditions for your level of experience.
- Pay special attention to the terrain you will be flying and the weather conditions before you launch. If you are unsure do not fly, and always add a large safety margin to all your decisions.
- NEVER fly your glider in rain, snow, strong wind, turbulent weather conditions or clouds.
- If you use good, safe judgment you will enjoy many years of paragliding.
- Respect the environment and look after your flying sites.
- If you need to dispose the wing, do so in an environmentally responsible manner.
- Do not dispose of it with the normal household waste.

Remember, PLEASURE is the reason for our sport!



YOUR SOLOS LITE

The Solos Lite is a light & sleek reversible harness design with technical features throughout. Comfortable and intuitive to fly, it is ideal for pilots of all levels, specifically designed for hike & fly pilots who carry a bit more than a typical ultralight kit.

Converting from harness to the comfortable and well-appointed backpack is simple and fast, with the harness stored in a compact configuration inside the back pocket. The conversion is simple: you can leave your hydration system in place, there is a zipped hip pocket, a large zipped pocket and lycra pocket on the sides, three compression straps for an even and compact carry-mode, and an effective waist belt.

The volume and back support length of the Solos Lite pack is unique to each size, and matches the harness back support length, this ensures that your pack fits you as well as the harness does.

A hybrid leg-strap / seat board design provides a precise feel in flight, with easy weight-shift control and comfortable feedback. The seat board is removable if weight-savings are a priority, and in this configuration the Solos Lite remains agile and comfortable. The structure and geometry is clean and simple with intuitive adjustments. The Solos Lite back support structure is substantial for such a light harness. It is comfortable in reclined or upright flying positions, allowing you to relax and enjoy the flight.

The fully certified inflatable back protector is effective, lightweight and compact. It offers protection during take-off, offers some protection from side-impacts and can be fully deflated for compactness when hiking. We believe it is more effective than traditional ram air inflated airbag designs and saves weight and volume compared to the standard Mousse solution.

The Solos Lite is available in S, M & L sizes and in two colour options.





PREPARATION

***O* UNDER-SEAT PROTECTION REMOVAL/INSTALLATION**

The Solos Lite features a certified EN/LTF/CE inflatable under seat protector. Cleverly designed, it offers excellent impact absorption properties despite the low weight and volume. The protection is in place upon delivery, but should you need to remove it or replace it please follow the instructions.

The protection is located within the zipped pocket found within the black zipped compartment at the bottom of the main rear pocket under the seat.



Open the side zip to reveal the inflation pipe, unlock the stopper and remove it from the pipe.

With the protection deflated, open the blue pocket, remove the protection and feed the pipe through the hole in the pocket door.



Installation of the back protection is the exact reverse of this procedure.



UNDER-SEAT PROTECTION INFLATION




The protection is inflated by hand using trapped air inside the supplied special stuff sack.



To inflate the protection open the side pocket to access the inflation pipe.



Make sure the stopper is in the open position and attach the inflation pipe to the outlet found on the stuff sack.

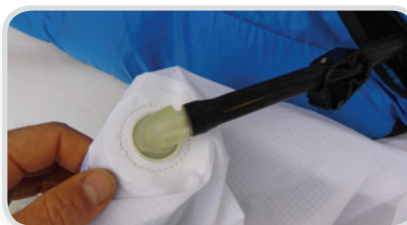

Close off the top of the stuff sac by rolling it tightly in the hands to trap the air inside and push/squeeze so the air is transferred into the protection.



Once the protection is fully inflated - to the point at which you cannot easily add any more air using the stuff sack - close the inflation pipe stopper. Make sure the stopper is fully closed.

Close the inflation pipe inside its pocket.



IMPORTANT: Ensure the inflation pipe stopper is properly closed before inserting the pipe into the pocket. Failure to do so will result in the air leaking out and the protection not functioning.

To deflate the air bag when reversing the harness open the inflation pipe stopper and gently squeeze the air out of the protection.



SPEED SYSTEM

A lightweight integrated speed-line is included as standard. The speed system is already installed by the factory but if you ever need to replace it follow these steps.

Route the line down through the small reinforced slit found on the outside of the side panel.



Pass the line through the Ronstan pulley.

Then through the small opening and metal ring shared with the bungee at the front of the seat plate.



Ensure that the lines run cleanly through the pulleys and pass to the outside of all structural webbing straps.

Attach the bar to the speed line and bungee using suitable knots. Once in the air, and when it is safe to do so, check that you can place your foot on the bar easily and that the system operates smoothly all the way to full speed.

IMPORTANT: The speed bar lines must be of equal length, ensure they are not too short as this will inadvertently activate the speed system when under tension in the air. Always double-check lengths and symmetry whilst on the ground before flying.



***O* RESERVE PARACHUTE INSTALLATION**

The Solos Lite has an integral under seat reserve parachute container and is supplied with a dedicated deployment bag. The container/ deployment bag is suitable for parachutes with a volume of between 3 and 6ltrs and will accept most modern rescue parachutes including the Angel SQ 140 and steerable Rogallo types.

WARNING: Ozone strongly recommends that the reserve parachute system is installed by a qualified professional. Always seek experienced advice if you have any doubts.

Make sure you perform a practice throw from a static hang point. Not only does this ensure the correct functioning of your deployment system it also allows you to become more familiar with the installation process.

NOTE: The parachute can only be deployed with the right hand.

To install a reserve parachute you should first pack the parachute so that it matches the shape and dimensions of the deployment bag. You must use the dedicated Solos Lite deployment bag/handle.





Ensure the harness bridle is correctly routed into the reserve compartment as shown. Bring the zip securing the harness parachute bridle all the way to the end near the parachute compartment.

NOTE: The Solos Lite is only suitable for reserve parachutes with a short bridle.

Attach the harness bridle to the parachute bridle using a suitable connector and secure the ends with elastics (not supplied).



Place the deployment bag neatly within the container matching the position of the arrow and ① to the main flap. The parachute lines should be uppermost.

NOTE: The parachute container has a small foam block held in position by Velcro. This must be left in position for the correct functioning of the reserve parachute system.



Now fold the deployment bag handle along the dotted line so the small arrow head matches the larger one.



The ② should now match positions on the handle and container.



Slide the black tag of the handle between the bridle and harness to hold it in position.



Now feed the yellow securing pins through the pin eyelets. Start with the pin located near the bridle. Each pin always starts with a red eyelet, feed the pin through each eyelet in order, make sure to not miss any inadvertently.



The end of the pin should be fed into the end pocket to fully secure it.




Now feed the reserve handle fully into the slot at the upper front part of the container. This secures the handle in position.



Now secure the next upper pin routing it through the eyelets. Ensure the red eyelet is routed first.



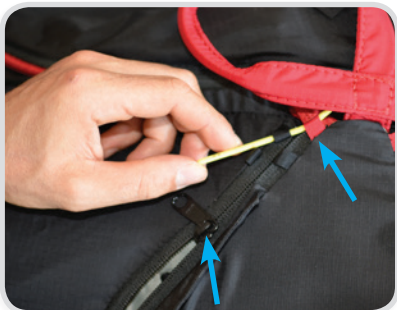

Run both container zips towards the reserve parachute bridle, as far as they can go. Then reverse the direction of the zips to close the container. At this stage do not fully close the container, close the zips just enough to secure the pin eyelets in position.

Feed the yellow plastics through the eyelets - Red eyelet first. Make sure both pins down each side of the container are correctly secured.



The parachute container and bridle compartment zips can now be closed fully. Secure the zips within the tags. On the container the tags are coloured red and on the bridle sleeve it is coloured black.



FITTING / ADJUSTMENTS

Before your first flight, we recommend to suspend the harness from a suitably strong point to check that it fits you correctly and to become familiar with the features and adjustments. You can set the shoulder adjustment-straps to find the best fit, and adjust the lumbar support so that they leave you in a comfortably reclined position. Fine tuning can then be made during your first flights to find the perfect set up for you.

SHOULDER STRAPS

The length of the Shoulder straps can be modified using the adjustment straps. Adjust the shoulders whilst standing up with the harness on so that they are comfortably snug. Whilst suspended in the seated position ensure the straps are comfortable and supportive, they should not be too tight nor too loose.



LUMBER SUPPORT

The Lumbar support should be adjusted for a comfortable flying position. Precise adjustments can be made in the air so that your lower back is completely supported and there is no tension in your stomach muscles. Be sure to adjust the lumbar supports carefully, setting them too loose will result in a very reclined position in the air.



LEG STRAPS / CHEST STRAP



Fasten the leg/chest straps with the lightweight T lock buckles.
Slip the T lock completely through the loop and then secure in place with the elastic loop.

IMPORTANT: The elastic loops must be in place as shown.
Failure to do so could result in the leg/chest strap opening.



Repeat so that both legs are secured.

The length of the leg straps / chest strap has been carefully set to give an excellent balance between weightshift sensitivity, feedback, roll stability and comfort. They are not adjustable.





The shoulder strap retainer clip is fastened by inserting the male part into the female part until an audible click is heard and felt.



REVERSING THE HARNESS

BACK PACK MODE

To reverse the harness into backpack mode, it is not necessary to disconnect the wing from the carabiners or remove the hydration system. If using a hydration system first remove the tube from the shoulder anchor points.



Ensure all the buckles, carabiners, risers and structural straps are placed on the inside of the harness structure, then fold the harness in half so the parachute is uppermost.



Undo completely the zip of the rear pocket and turn it inside out, it can now be done up again to completely enclose the harness structure.




Undo the clip and then the zip of the rucksack section and turn it inside out.



The wing can be placed on top of the harness structure and compressed into place with the adjustable strap.

Now you can zip up the rucksack leaving the Camelback in place.

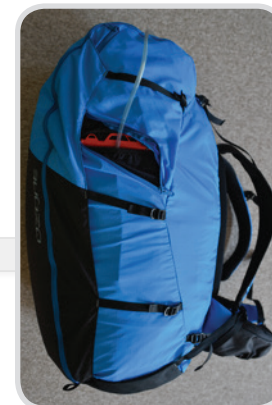

HARNESS MODE

To convert from backpack mode to harness mode, reverse this procedure.



FEATURES

HYDRATION ACCESS SYSTEM

The Solos Lite features an innovative hydration system. Whilst in rucksack mode the pocket is located on the right hand side, the Camelback can be left in place when converting into harness mode, the tube can be routed through the opening on the left hand shoulder and secured in the anchor point.



VELCRO SHOULDER MOUNTING

On the opposite shoulder strap, there is a lightweight Velcro mounting point for a small vario, tracking device or a radio.



REMOVABLE SEAT PLATE

If weight saving is the priority the seat plate can be removed. Access is from the black zipped pocket at the bottom of the rear pocket. When replacing, the narrower end goes towards the front. Route it through the structural webbing into the thin pocket and secure the Velcro tabs to hold it into position.



STORAGE POCKETS

In addition to the main rear pocket, in harness mode there is a side pocket with an internal retaining clip.



There are three pockets in backpack mode; a hip pocket with retaining clip on the waist strap, the large Hydration pocket and a smaller pocket with retaining clip located just above.



USE AND MAINTENANCE

CONNECTION TO THE WING



Attach the wing's risers to the carabiners at the main hang points. The A risers should be facing to the outside.

If you change the carabiners ensure that they are of a suitable dimension and fit correctly. The carabiners must be passed through both blue loops 1 & 2 - the main hang point (1) and the lumbar support loop (2).

There are no other suitable attachment points for the risers on the harness.



PRE-FLIGHT CHECKS

Before take off it is important to carry out a thorough pre-flight check.

- Ensure the parachute pins are correctly in place and the zips around the parachute container are closed
- Visual check of structural webbing looking for any obvious damage
- Visual check of the carabiners looking for cracks or any signs of fatigue
- Risers connected correctly to the carabiners without twists
- Speed system attached and not tangled around the webbing
- Ensure all pockets are closed and zipped up
- Leg / Chest strap done up correctly
- Shoulder strap retainers fastened correctly
- Double check your leg straps



PARACHUTE DEPLOYMENT

If you are in the unfortunate situation of needing to throw your reserve, do so with conviction:

Look; Reach; Pull; Throw.

- Look at the handle, grab it and pull so the retaining pins are released. The parachute can only be thrown with the right hand.
- Pull out the deployment bag, it is best to pull towards the outside so that the parachute extracts sideways from the pocket, pulling the handle upwards may not allow the parachute to release properly. Know your equipment and adapt your technique accordingly.
- Throw the parachute away from you as hard as you can into clear space, not towards your wing. It is important at this stage to remember to LET GO of the handle. Aim to throw with the direction of airflow to aid a fast opening and against the direction of rotation.
- If after throwing the parachute does not deploy (possible in low energy emergencies e.g. parachutal stall), grab the reserve bridle and give it a strong pull. This will help encourage the parachute to open faster.
- As the parachute deploys, the next stage is to concentrate on disabling the paraglider. There are several ways to do this – B line stall; rear riser stall; gathering the canopy by working up the A lines until you have the material in your hands or using the brakes to stall the wing. The best technique depends entirely on the situation. The most important thing to remember is to completely disable the wing so that it does not act against the parachute and cause a down-plane. Whichever method you choose do so symmetrically, you do not want the paraglider to start rotating, this could cause the paraglider to fly into and effectively disable the parachute.
- Due to the position of the reserve bridle hang points on most harness, deploying the reserve parachute tends to automatically put you in to the PLF position (legs down), if you are not, do everything you can to get yourself into this position so you can absorb the landing impact with your legs.
- Always use a PLF when landing under emergency situations or under a rescue parachute.

TOWING

The Solos Lite is suitable for towing. The tow bridles should be attached to the main carabiners, if you have any doubts ask a qualified towing instructor or see the operating instructions supplied with your tow release system.

EXTERNAL PARACHUTE CONTAINER

An additional parachute container (not included) may be added to the Solos Lite. Use the main carabiners to secure the container and parachute bridles.



WATER LANDING

After a water landing you should remove the reserve parachute, under seat protection, back comfort foam and seat plate and allow to dry. If you land in salt water it is necessary to thoroughly clean the harness and all parts with fresh clean water ensuring that all traces of salt are removed. Before reassembly make sure that the harness and all components are completely dry.

IMPORTANT: In the case of a water landing, the natural buoyancy of the back protection and rear section can cause the pilot to be turned face down in the water. It is recommended to immediately undo all straps and swim away from the harness taking care to not become entangled within the lines.

CARE

The Solos Lite will last you many flights and many years if looked after correctly. To keep your harness clean and airworthy, please note the following:

- Avoid excessive exposure to UV, heat and humidity.
- Pack the harness dry and store in a cool dry place.
- Never drag your harness, especially when landing.
- Keep you harness clean of dirt and away from any oils or other corrosive substance.
- Use water and a cloth to clean.

INSPECTION

For safety, routine inspection of all of your equipment is vitally important. Ozone recommends a service interval of 12 months in addition to the usual pre flight checks. For inspection, visually check the stitching, webbing and all structurally important areas. Pay particular attention to the webbing around the hang point area under the carabiner, as this is where abrasion is most likely.

If you find any damage or if you are in any doubt make sure the harness checked by a professional.

DISPOSAL

When the harness comes to the end of its useful life, remove all the metal parts and dispose the rest in an environmentally friendly manner.



OZONE QUALITY GUARANTEE

At Ozone we take the quality of our products very seriously. Our harnesses are made to the highest standards in our own manufacturing facility. Every harness manufactured goes through a stringent series of quality control procedures and all the components used are traceable. We always welcome customer feedback and are committed to customer service. Ozone guarantees all of its products against manufacturer's defects or faults. Ozone will repair or replace any defective product free of charge. Ozone and its distributors provide the highest quality service and repair, any damage to products due to wear and tear will be repaired at a reasonable charge.

If you are unable to contact your dealer then you can contact us directly at info@flyozone.com.

Summary

Safety is paramount in our sport. To be safe, we must be trained, practised and alert to the dangers around us. To achieve this we must fly as regularly as we can, ground handle as much as possible and take a continuous interest in the weather. If you are lacking in any of these areas you will be exposing yourself to more danger than is necessary.

Every year many pilots get hurt launching; don't be one of them. Launching is the time that you are most exposed to danger so practice it lots. Some launch sites are small and difficult and conditions aren't always perfect. If you're good at ground handling you'll be able to confidently and safely launch whilst others struggle...practice as much as you can. You'll be less likely to get hurt and more likely to have a great day's flying.

Respect the environment and look after your flying sites. When the harness comes to the end of its useful life, remove all the metal parts and dispose the rest in an environmentally friendly manner.

Finally, RESPECT the weather, it has more power than you can ever imagine. Understand what conditions are right for your level of flying and stay within that window.

Happy flying & enjoy your Solos Lite.
Team Ozone



TECHNICAL SPECIFICATIONS

	S	M	L
Weight (kg)	2.2	2.3	2.5
Recommended pilot height (cm)	<175	170-185	>180

Weight includes all standard options: Back protection, carabiners and rescue bridles.

MATERIALS

Harness Outer fabric

Dominico 40D, 70D, fab Geo

Rucksack Outer fabric

Dominico 40D, 70D, fab Geo

Main webbing

Technisangle 7

Reserve parachute Bridles

Dyneema 6mm

Buckles

T Lock toggles

Edelrid adjustment buckles

Carabiners

Edelrid Foras

CERTIFICATION

The Solos Lite is certified EN 1651:2017 and LTF with a maximum load of 120kgs. In addition, the inflatable under seat protection is certified to the CE standard by CRITT (France).





1258 Route de Grasse
Le Bar sur Loup
06620
France

Inspired by Nature, Driven by the Elements

WWW.FLYOZONE.COM